



Operating Manual

Translation of Operating Manual

SONOREX TECHNIK MB

MB Lifting Device with oscillation




Example SONOREX TECHNIK MB 16.3



Example SONOREX TECHNIK MB 210.3 B

valid for:

MB 16.3, MB 40.3, MB 75.3
MB 110.3, MB 180.3, MB 210.3
MB 110.3 B, MB 180.3 B, MB 210.3 B

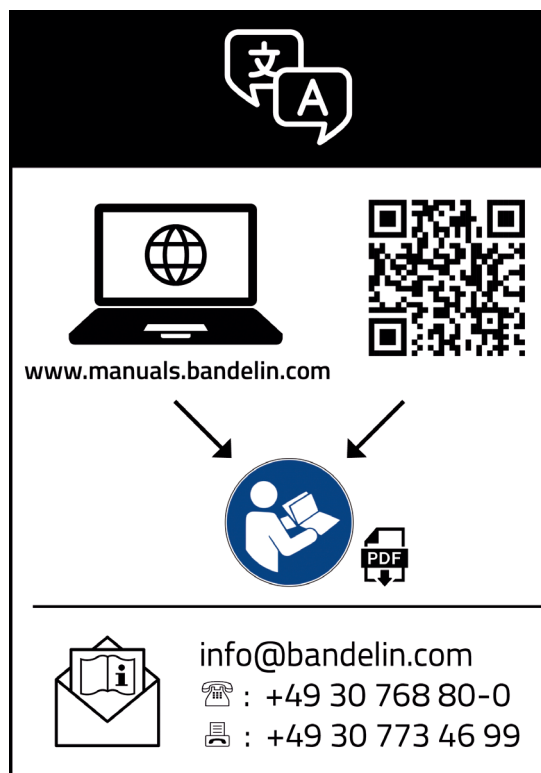

Copyright & limit of liability

This document may not be reproduced, whether in full or in part, without the prior approval of BANDELIN electronic GmbH & Co. KG, hereinafter "BANDELIN".

The German language original is the binding version of this document. Any differences in the translation are not binding and have no legal effect. In case of any discrepancies between the translation and the original of this document, the original version will take precedence.

BANDELIN accepts no responsibility or liability for damage caused by improper handling or usage contrary to the intended purpose.

The documentation has been prepared with great care. All liability is excluded for any direct or indirect losses resulting from incomplete or erroneous information contained in this documentation, or in its presentation or usage.

Subject to technical alterations. Measurements are subject to manufacturing tolerances.

All illustrations are provided as examples and are not true to size. Decorative elements are not included in the scope of delivery.

© 2023

BANDELIN *electronic* GmbH & Co. KG, Heinrichstraße 3 – 4, Deutschland, 12207 Berlin,

Tel.: +49 (0)30 7688 00, Fax: +49 (0)30 7734 699, info@bandelin.com

General

The device and the accessories are to be used in accordance with the operating manual and/or the product information.

The Manual forms part of the scope of delivery and is to be stored in the vicinity of the device for later reference. This also applies if possession of the device is transferred elsewhere.

Before the device is put into service, this manual must be read carefully and completely to familiarise the user with all of the device functions.

Follow the warnings and safety instructions (chapter 1.5) at all times while using the device.

The manufacturer will not assume any responsibility for the device's safety or functionality in the event of improper handling or usage contrary to the intended purpose. Unauthorised alterations/modifications will render both the warranty claim and the CE conformity null and void.

If service is required, please contact the authorised dealer or the manufacturer.

Symbols used:







Symbol	Meaning	Explanation
	Danger	Denotes information that, if not observed, could pose a risk to life and limb, especially from electric shock.
	Warning of hand injury	Used to mark information that, if not observed, could constitute a risk to life and limb, especially as a result of crush hazards between the tank edge and basket.
	Warning	Identifies information that must be observed and complied with in order to prevent injury to the user or damage to the device.
	Important	Identifies information that is important for execution.
	Note	Identifies explanatory information.
	Instructions	Used to mark instructions that must be followed in the given sequence.

Table of Contents

- 1 Product description6
 - 1.1 Mode of operation8
 - 1.2 Intended use8
 - 1.3 CE conformity8
 - 1.4 General technical data9
 - 1.5 Warnings and safety precautions 11
- 2 Preparation12
 - 2.1 Scope of delivery12
 - 2.2 Setup / assembly13
 - 2.3 Putting into service13
- 3 Operation14
 - 3.1 Operating elements14
 - 3.2 Touchscreen14
 - 3.3 Additional settings15
- 4 Use16
 - 4.1 Instructions for use16
 - 4.2 General usage17
- 5 Maintenance and cleaning18
 - 5.1 Cleaning and care18
 - 5.2 Warehousing / storage18

6	Maintenance and repair	19
6.1	Maintenance	19
6.2	Troubleshooting	19
6.3	Customer service	20
6.3.1	Repairs and service	21
6.3.2	Certificate of Decontamination	21
6.3.3	Replacing fuses	21
7	Accessories	22
8	Taking the unit out of service	23


1 Product description

Lifting device, SONOREX TECHNIK MB ... or MB ... B.

The exact type specification and serial number are found on the type plate on the back of the lifting device.


Product features, control box:

- Display (1)
- Control buttons (2)
- EMERGENCY STOP switch (3)
- Main switch, latching button (4)

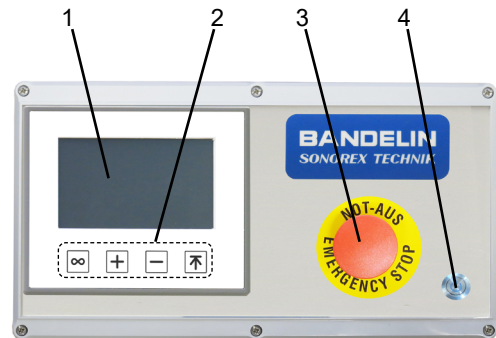

Product features MB 16.3 - 75.3, MB 110.3 B - MB 210.3 B:


- Control box (1) with operating elements
- Support arms (2) with push buttons for two-handed operation
- Profile frame (3)
- Lifting carriage plate (4)
- Gear motor (5)
- Protective blinds (6)
- Hood (7)
- Belt (8)

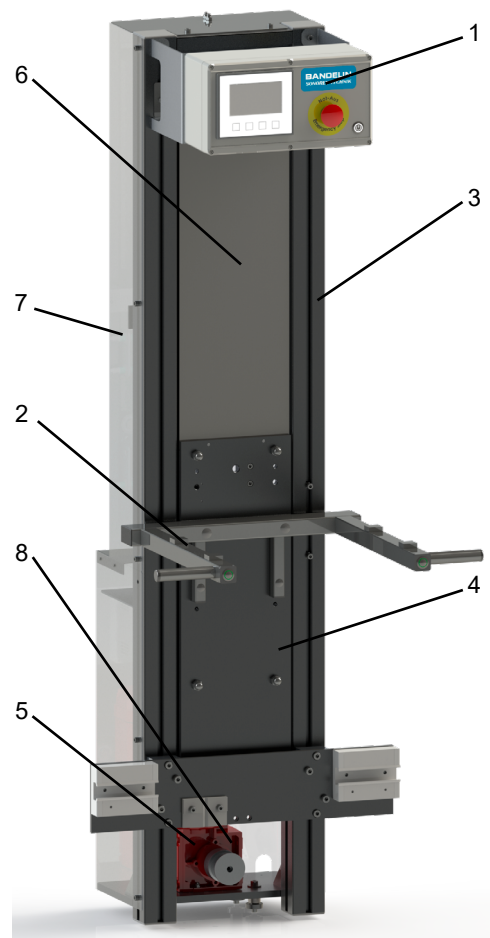

SONOREX TECHNIK MB 16.3

Product features MB 110.3 - MB 210.3:

- Control box (1) with operating elements
- Support arms (2) with push buttons for two-handed operation
- Profile frame (3)
- Lifting carriage plate (4)
- Gear motor (5)
- Protective blinds (6)
- Hood (7)
- Belt (8)
- Bracket mount (9), for positioning ultrasonic bath
- Height-adjustable feet (10)

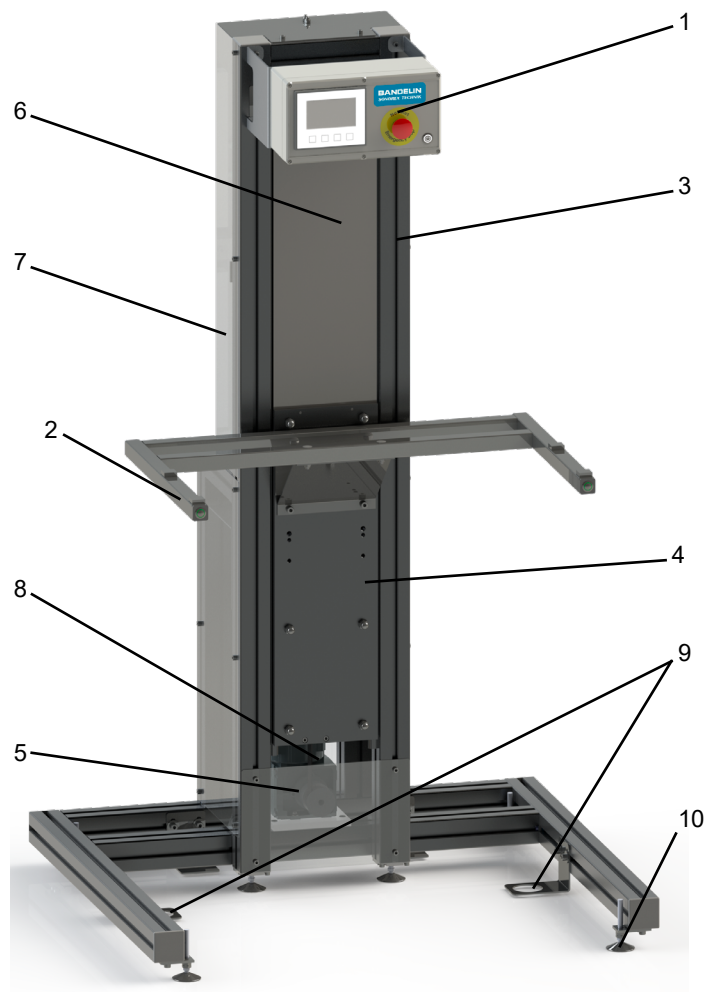

SONOREX TECHNIK MB 210.3

1.1 Mode of operation

The electrically powered SONOREX TECHNIK MB lifting devices enable automated basket movement in tanks belonging to the SONOREX TECHNIK RM/TM bath series. The lifting carriage is belt-driven.

The objects to be cleaned are placed in the basket and the handles of the basket are hung on the support arms of the lifting carriage.

1.2 Intended use

The oscillating motion of the objects to be cleaned in the bath makes the ultrasonic cleaning more effective and improves the rinsing off of corroded soiling.

Depending on the model size, the SONOREX TECHNIK RM/TM bath is positioned either on the lifting device stand or on the floor, and is secured against sliding/rocking with bracket mounts.

Existing SONOREX TECHNIK RM/TM ultrasonic baths can be equipped with a lifting device without any retrofitting work. By using a special tank rack, the lifting device can be moved on rollers between two or more tanks to the next tank and then locked in position (provided as standard in the RM 16.2 to 75.2 module programme). For the RM 110 to 210 and RM/TM 112 to 212 module programme, a stationary (MB ...) and moveable lifting device (MB ... B) are available.

The focus of use is on providing support to ultrasonic cleaning. Additional processes such as rinsing are also possible and depend on the design of the SONOREX TECHNIK RM/TM bath. Use of the lifting device without a SONOREX TECHNIK RM/TM bath is not permitted.

The device is operated on the front side via push buttons in the support arms and on the display. SONOREX TECHNIK lifting devices are designed as floor-standing units.

1.3 CE conformity

The devices fulfil the CE marking criteria of the following European Directives:

- 2006/42/EC – Machinery Directive
- 2014 / 30 / EU – EMC Guideline
- 2011 / 65 / EU – RoHS Directive

The declaration of conformity is enclosed with the delivery.

1.4 General technical data

Mains connection:	230 V~ ($\pm 10\%$) 50/60 Hz
Load:	max. 40 kg
Travel speed:	1.4-4.3 m/min
Oscillation height:	40-430 mm
Degree of protection:	IP 20
Material:	Frame and lifting carriage: Aluminium support arms: Stainless steel control box: ABS plastic
Mains cable:	3 m
Fuses:	3 \times slow-blow 2.5 A; 1 \times slow-blow 1 A

Ambient conditions

Overvoltage category:	II
Degree of contamination:	1
Permissible relative humidity up to 31 °C:	80 %
Permissible relative humidity up to 40 °C:	50 %
Permissible ambient temperature:	5 to 40 °C
Altitude:	up to 2000 m above sea level
No dewing.	
For indoor operation only.	

- Order No.:

- Lifting device with oscillation, movable for tank rack WG

SONOREX TECHNIK Series	Type	Order No.
RM 16.2	MB 16.3	8390
RM 40.2	MB 40.3	8391
RM 75.2	MB 75.3	8392
RM 110	MB 110.3 B	8396
RM 112		
TM 112		
RM 180	MB 180.3 B	8397
RM 182		
TM 182		
RM 210	MB 210.3 B	8398
RM 212		
TM 212		

- Lifting device with oscillation, fixed for 1 bath

SONOREX TECHNIK Series	Type	Order No.
RM 16.2	-	-
RM 40.2	-	-
RM 75.2	-	-
RM 110	MB 110.3	8393
RM 112		
TM 112		
RM 180	MB 180.3	8394
RM 182		
TM 182		
RM 210	MB 210.3	8395
RM 212		
TM 212		

1.5 Warnings and safety precautions

General

- In accordance with its intended use and this Operating Manual, the lifting device must only be used together with a SONOREX TECHNIK RM/TM ultrasonic bath or rinsing bath. Accordingly, all safety instructions found in the operating manual for the SONOREX TECHNIK RM/TM ultrasonic bath in use, also apply.
- Keep the device out of the reach of children and persons who have not been instructed in its operation using this Operating Manual.
- Do not expose the device to corrosive materials.
- Keep the device and the stand clean and dry.
- The Operating Manual and its safety instructions must remain with the device and be observed at all times.
- If the device changes ownership, the Operating Manual and safety instructions must also be handed over.

Operation and transport

- Place the device upright on a dry and firm foundation. Pay attention to the ambient conditions (chapter 1.4).
- Only plug the device into an outlet with an earthed socket.
- Do not operate the device unattended.
- Do not touch any moving parts during operation.
- There is a risk of being crushed between the tank edge and insert basket after the lifting device (MB) is switched on.
- Remove/hang objects to be cleaned only with the device switched off.



Damages and defects

- Use only the connection materials supplied.
- Disconnect immediately from mains power in the event of a defect.
- In the event of a defect, the unit must be repaired by authorised and qualified personnel or the manufacturer.
- Replace defective parts only with SONOREX original parts or parts of the same quality!
- Replace a defective mains cable completely.

2 Preparation

Carefully unpack the lifting device and accessories, and check all parts are present and have not been damaged in transit. Any identified damage or defects must be communicated immediately and in writing to the transportation company and to the supplier.

Before commissioning, the lifting device should be allowed to stand for 2 hours at its installation site to allow it to adjust to ambient conditions.

2.1 Scope of delivery


Lifting devices are supplied fully assembled and with or without a tank rack.

- 1 Lifting device, see delivery note
- 1 Operating manual
- 1 Declaration of conformity

Additional accessories according to order – see delivery note

2.2 Setup / assembly

- Fully remove transportation aids (pallets, transport safety devices).
The lifting device is delivered with the support arms in the lower position.

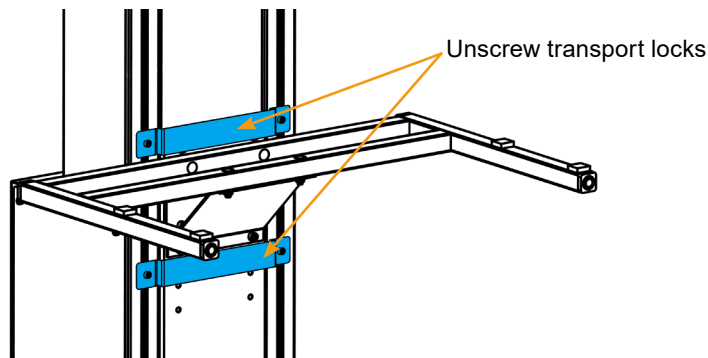

- Set up the device in a dry room and level the device using the height-adjustable feet.
- Check the switch positions on the lifting device:
EMERGENCY STOP pulled.
- Connect the lifting device to a 230 V mains socket.
- Turn on the main switch.
- The touchscreen operation is initialised.
- Place the tank(s) onto/into the tank rack positions fixed with screws;
insert drip plates between the tanks if required.

2.3 Putting into service


Movable lifting devices must be moved manually between the SONOREX TECHNIK RM/TM baths (cleaning or rinsing baths). They must snap into the stand, centred above the respective bath.

- Position the lifting device centrally above the SONOREX TECHNIK RM/TM bath.
- Hang the basket onto the support arms of the lifting carriage.

3 Operation

3.1 Operating elements

The unit is operated from the front:

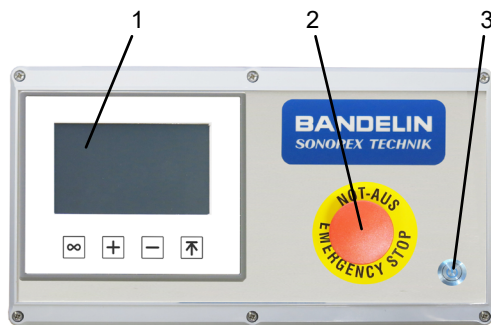

- 1 Touchscreen/display
- 2 EMERGENCY STOP switch
- 3 Mains switch, latching button
- 4 Button, two-hand switch for lowering and raising



3.2 Touchscreen


The oscillation time is controlled/set using the control buttons on the display.



- 1 Display of operating status
- 2 Duration
- 3 Oscillation (On / Off)
- 4 "Continuous operation" button
- 5 "Time setting" button (+)
- 6 "Time setting" button (-)
- 7 "Raising" button
- 8 "Settings" button

Timed operation:

- Enter the target time in minutes with the control buttons (+ and -).
 - Press and hold the two-hand switch for 3 seconds.
 - The rest of the process takes place automatically. The time set in the display will count downwards.
 - After the time has elapsed, the lifting carriage moves upwards, back to the starting position.
 - The same process is repeated by pressing the two-hand switch once again.
- Pressing a button on the two-hand switch once or pressing the “raise” button will cancel the time program.
 - The lifting carriage moves upwards, back to the starting position.

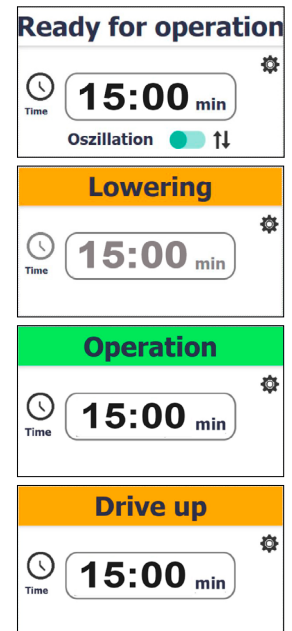

Continuous operation:

- Set by pressing the “Continuous operation” control button. Start continuous operation by pressing the two-hand switch and holding for 3 seconds.
 - The operation can be cancelled at any time by pressing a button on the two-hand switch or by pressing the “raise” button.




Note

- While switched off, the lifting device can remain connected to mains power. It can be disconnected by pulling the mains plug.


3.3 Additional settings

By pressing the “Settings” button, it is possible to select another language (German, English, French) or to call up the operating hours display.

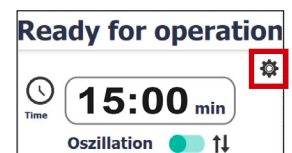

The oscillation can be switched on or off in the display.

- When oscillation is active, the lifting device moves downward after the lowering, and then oscillates in the ultrasonic or rinsing bath for the duration of the operating time.
- If the oscillation is switched off, the lifting device moves only to the bottom position after the lowering, and moves up again after the time has elapsed.

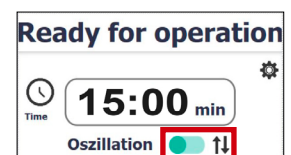

4 Use

Lowering and lifting out the basket from the ultrasonic or rinsing bath, and oscillation of the basket in the ultrasonic or rinsing bath.

4.1 Instructions for use



- If the machine will NOT be used for a long period of time, press the EMERGENCY STOP button.
- Place the objects to be cleaned in the basket, also noting:
 - Arrange parts evenly, do not stack them.
 - Overloading the basket is not permitted.
 - More heavily soiled sides should face downward.
 - Open out parts with joints before placing in the basket.
 - Fragile parts must not be touching each other.
 - For technical reasons, the ultrasonic effect is weaker on the outlet side.
Do not place more heavily soiled objects in the basket over the outlet.
- Hang the basket onto the support arms of the lifting device.



Important:

- In case of emergency, press the red EMERGENCY STOP button ⇒ the lifting device shuts off.
Release by turning the knob to the left. Oscillation stops despite the release of the EMERGENCY STOP button (safety switch).
The lifting carriage can only be moved to the upper end position by actuating the two-hand switch.
- Do not switch on movable lifting devices until they are properly engaged (locked into place) on the tank rack.
- If the lifting carriage has been manually raised more than 5 cm, switch off and isolate the lifting device from the mains power, and check whether the belt between drive system and lifting carriage runs smoothly. The belt in the lifting carriage must be positioned between the two guide bolts.

4.2 General usage

Step 1 : Positioning

- Position the lifting device centrally above the SONOREX TECHNIK RM/TM bath.

The support arms and basket must always be centred above the ultrasonic or rinsing bath.

Step 2 : Loading

- Hang the basket, already loaded with objects to be cleaned, on the support arms of the lifting carriage. Observe the maximum permissible loads for both the basket and lifting device.

Step 3 : Setting the oscillation time

- Set the desired oscillation time directly on the touchscreen or using the control buttons (see chapter 3).
- Activate oscillation: Press and hold both buttons on the two-hand switch for 3 seconds. The lifting device automatically lowers the basket into the tank and initiates the continuous raising and lowering of the basket in the liquid (oscillation). This strengthens the cleaning/rinsing effect.

Step 4 : Ending the oscillation

- After the set time has elapsed, or actuation of a button on the two-hand switch, or actuation of the “raise” button ends the oscillation movement, the lifting carriage moves the basket into the upper end position.
- Remove the basket from the support arms and place it securely on a horizontal surface.



Depending on the temperature set for the ultrasonic or rinsing bath, the basket and parts may be hot!

5 Maintenance and cleaning

Cleaning and maintenance should be performed regularly to maximise the service life of the lifting device.



WARNING!

Always disconnect the lifting device from the mains before performing cleaning/maintenance.



Do not hose down and do not expose to splash water.

5.1 Cleaning and care

Cover and stand

- Do not use abrasive cleaners, only use commercially-available care products without scouring agents.
- Wipe the housing only from the outside with a moist cloth; if needed, use a suitable surface disinfectant, then allow to dry or rub dry.

Guide rails

- The vertical and, if necessary, horizontal guide rails (only for lifting devices with tank rack) are hard chromium plated.
To prolong the lifespan, they must be cleaned with an oily cloth at regular intervals.

5.2 Warehousing / storage

During extended periods without use, the lifting device should be stored in a cool, dry place.

6 Maintenance and repair

6.1 Maintenance

The belt must be checked for wear depending on use, but at least every 6 months or after 1,000 operating hours. To do so, turn off the lifting device and disconnect from mains power. Then temporarily remove the rear hood. The belt guidance can be checked at the same time. For details, see chapter 4.1.

6.2 Troubleshooting

SONOREX TECHNIK lifting devices are robust pieces of equipment designed to offer years of reliable service.

Nevertheless, the possibility of a malfunction due to a defective component can never be fully discounted.



Warning!

Risk of electric shock



Repairs may only be performed by authorised, qualified personnel!

Unauthorised repairs will void the warranty!

Problem	Possible cause	Remedial action
Device cannot be switched on.	- Has the EMERGENCY STOP button been pressed?	Turn and pull out the button.
	- No power	Check the power supply
	- Loose connection?	Check the plug connection.
	- Mains fuse defective?	Replace the main fuse. Check and replace fuses as necessary.
	- Fuse in device defective?	Replace the fuse. Check and replace fuses in the control box as necessary.
	- Mains cable defective?	Check cable for continuity or replace if needed.
	- Touchscreen defective?	Check the activity of the power supply and main controller. Check all plug connections.
	- Power cable to motor defective?	Check power cable and replace if needed.
	- Motor defective?	Replace motor.

Problem	Possible cause	Remedial action
Basket with objects to be cleaned moves too far up or down	- Belt worn out or defective?	Replace the belt.
Basket with objects to be cleaned moves erratically (jerky movements)	- Belt loose/caught up?	Replace the belt.
	- Protective blind defective?	Replace protective blind.
Basket with objects to be cleaned does not move or produces a lot of noise when moving	- Basket is overloaded?	The lifting device can move a maximum load of 40 kg. Switch off the device, reduce number of objects to be cleaned or the load, and switch on again after 2 minutes.
When moving horizontally, the lifting device does not pause over the tank, or only with difficulty	- Movable MB no longer locks into place (audibly) above the oscillating tanks?	Replace pressure fitting.
	- INA track roller(s) worn out?	Replace INA track roller.

Error messages on the touchscreen/display

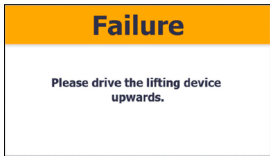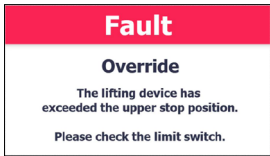Problem	Possible cause	Remedial action
	- The EMERGENCY STOP switch was pressed during lowering.	By simultaneously pressing the two buttons on the two-hand switch, the lifting device moves up and initialises again.
	- The upper limit switch does not work.	Inspect the upper limit switch.

6.3 Customer service

If service is required, please contact your specialist dealer or BANDELIN electronic to order spare parts or before sending in defective devices.

6.3.1 Repairs and service

If faults or defects have been discovered and cannot be rectified, the lifting device must be taken out of service immediately. If this occurs, please contact the supplier or the manufacturer:

BANDELIN electronic GmbH & Co. KG
Heinrichstrasse 3-4
12207 Berlin

Repair service:

Tel.: +49-(0)-30 – 768 80 – 13

Fax: +49-(0)-30 – 76 88 02 00 13

Email:

info@bandelin.com

In the event of returns, the General Terms and Conditions for Delivery and Payment of BANDELIN electronic GmbH & Co. KG apply.

The lifting device must also be cleaned and decontaminated (if necessary) – see the next section.

6.3.2 Certificate of Decontamination

If the lifting device is sent back to the manufacturer for repairs (with accessories, if applicable), the form “Certificate of Decontamination” must be filled out and affixed in a clearly visible location on the outside of the packaging.

If this form has not been filled out, we reserve the right to refuse receipt of the package in order to protect our employees.

The form can be downloaded as a PDF file from our website:
www.bandelin.com – Downloads ...

6.3.3 Replacing fuses



Warning!

Risk of electric shock

Repair work may only be carried out by authorised, qualified personnel or by the manufacturer. The manufacturer assumes no liability for unauthorised work on the device!



Always disconnect the mains plug before opening!

Risk of electric shock from live parts in the control box!

- Disconnect the lifting device from mains power.
- Loosen the screws in the control box and lift up carefully.
- The fuses are installed in the locking clips.
- After inspection, replace only the defective fuses. The fuse values are listed under “Technical Data”, see chapter 1.4.
- Reassemble the control box by following the steps in reverse order.
- Reconnect the mains cable.

7 Accessories

The right accessories make handling the ultrasonic application easier while protecting the oscillating tank and the objects to be treated.


BANDELIN offers a wide range of accessories.

Additional information may be obtained from our supplier, our sales representatives or from our website.

No-obligation telephone consultation:
+49-(0)-30 – 768 80 – 0

Website:
www.bandelin.com

Required accessories are baskets, for example

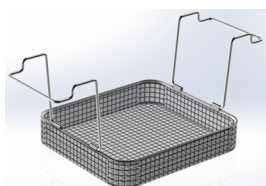

Accessories	RM 16.2 series		RM 40.2 series		RM 75.2 series	
	Type	Order No.	Type	Order No.	Type	Order No.
Stainless steel insert basket, maximum load 10 kg	MK 16 B	8412	MK 40 B	8413	MK 75 B	8414
Stainless steel basket, maximum load 40 kg	-	-	MK 40 BS	8411	MK 75 BS	8429

All baskets listed here are for use with MB only

Accessories	Series RM/TM 110/112		Series RM/TM 180/182		Series RM/TM 210/212	
	Type	Order No.	Type	Order No.	Type	Order No.
Stainless steel insert basket, maximum load 20 kg	MK 110 B	8417	MK 180 B	8418	MK 210 B	8419
Stainless steel basket, maximum load 40 kg	MK 110 BS	8481	MK 180 BS	8482	MK 210 BS	8483

All baskets listed here are for use with MB only

8 Taking the unit out of service

If the lifting device is no longer functional, it must be disposed of properly.

The device must be disposed of appropriately, not with household waste.

Disposal must be conducted in accordance with the Waste, Electrical and Electronic Equipment Directive 2012/19/EU.

Any supplementary/deviating national regulations must be observed.

- The device must be decontaminated before disposal. It can then be disposed of as electronic waste. If decontamination is incomplete/cannot be correctly performed, a material safety data sheet noting the liquids used must be affixed to each device.
- Metal accessories such as the lid or basket must be decontaminated and disposed of as metal waste.
- The packaging is recyclable.

